

## Owner's Manual IMPORTANT SAFETY INSTRUCTIONS

READ THE ENTIRE PRODUCT LABEL AND  
BELOW OWNER'S MANUAL BEFORE USING

The product is designed with metal grids built into the racket head. Do not pinch or press the grids together. Do not put objects or fingers through the racket face. Keep away from moisture. Do not use in rain. Safe for indoor and outdoor use. Do not attempt to make repairs on the unit. Call our customer service department at **1-800-799-7302** for assistance. This is not a toy. **KEEP AWAY FROM CHILDREN.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The unit requires 2 AA batteries, not included in this purchase. Do not mix old and new batteries. Do not mix alkaline, standard, or rechargeable batteries. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

**OPERATION INSTRUCTIONS:** After inserting batteries per above, test the power by pushing and holding the button on handle. Holding the button illuminates the red light indicating the electrical grid is activated. Grid shuts off after button is released, however there may be temporary residual energy remaining. Replace batteries when light no longer turns on. **NEVER HANDLE THE PRODUCT BY METAL GRIDS.**

**TO USE:** Safely aim the metal grid surface at flying insects while pressing and holding the trigger button to activate the electrical grid and swing. Making contact with the insect should kill the insect on contact. Do not swing next to people or animals.

**CLEANING:** As bugs make contact, particles may accumulate in the racket face. To clean, remove the batteries and allow the unit to sit for at least 45 minutes to release charge from electric grid. Use vacuum or soft, dry, non-metallic brush to remove any debris. Frequent cleaning will provide for more efficient use.

CAUTION – High Voltage. Keep out of Reach of Children.

CAUTION – High Voltage, Power off unit before servicing.

CAUTION – To reduce the risk of fire, remove insects frequently.

CAUTION – Collected insects may be a fire hazard. Clean dead insects from the unit frequently.

CAUTION – ELECTRICAL SHOCK HAZARD MAY EXIST IF WATER IS DIRECTED AT UNIT WHILE IN OPERATION.

CAUTION – Do not stick foreign objects, metal objects or fingers into the electrical grid.

CAUTION – Do not tamper with or modify unit.

CAUTION – Do not clean unit while it is powered on.

CAUTION – Before cleaning, allow unit to sit for at least 45 minutes to release charge from electric grid.

CAUTION – Do not clean or spray the unit with water, cleaning spray, or any other liquid. Do not use or leave in rain.

CAUTION – Do not submerge unit in water or any liquid.

CAUTION – Do not operate unit near flammable liquids.



**ELECTRIC SHOCK RISK –  
ONLY FOR DRY LOCATIONS**

**WARNING:  
THIS PRODUCT IS NOT A TOY.  
KEEP AWAY FROM CHILDREN.**

Activate the 1200V Electrical Grid By  
Pressing Button on Handle.  
Read this Owner's Manual  
for Important Safety  
Instructions and  
Directions for Use.